

# Quick Start WASHLET™ RW / RW auto flush

# TOTO

TCF801CG / TCF802C2G

- The "Water pressure adjustment", "Wand position adjustment" and "Personal setting" functions are swipe operated.

● Functions that operate when a button is pressed during "Rear cleansing", "Rear soft cleansing" or "Front cleansing".

**Note**

- Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

**"Oscillating cleansing"**

The wand moves back and forth to cleanse your rear thoroughly.

- The setting changes between "ON" and "OFF" each time the button is pressed.

**"Pulsating cleansing"**

Cleanses with the water pressure pulsating between soft and strong.

- The setting changes between "ON" and "OFF" each time the button is pressed.

**"Wand CLEAN"**

Cleans the wand with "ewater+".

- The wand can be automatically cleaned when you use the cleansing functions (Rear cleansing, Front cleansing, etc.). (Manual Page 18)

**Flushing \*1**

**"Full flush"**  
Performs a full flush.

---

**"Light flush"**  
Performs a light flush.

**Opening and closing**

**"Opening and closing the toilet seat"**  
Opens and closes the toilet seat.

**Note**

When setting Auto open/close to "OFF".

- The toilet lid opens/closes when you press the button.
- Press the button for longer than 1 second to open/close the toilet seat.

**Stopping**

**"Stopping"**  
Stops the operation.

**Cleansing**

**"Rear cleansing"**  
Cleanses your rear.

**"Rear soft cleansing"**  
Cleanses your rear with mild water pressure.


- The setting changes between and each time the is pressed.

---

**"Front cleansing"**  
Serves as a bidet for ladies.

**Drying**

**"Warm air drying"**  
Dries your rear.

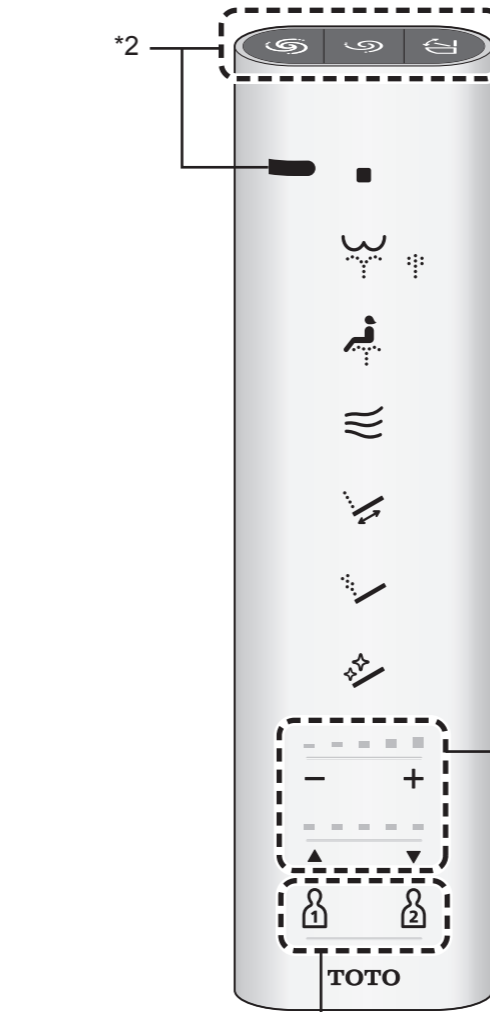

**"Personal setting"**

You can store your preferred "Water pressure", "Wand position" and "Warm water temperature" settings.

- To store a settings → Manual Page 60
- To use

(Swipe left)

(Swipe right)

Select or and press the button for the cleansing you want to use.

- The "Wand position" and "Water pressure" lamps will light up for about 10 seconds in their set positions, and the "Water temperature" display switches.

● Functions that operate when a button is pressed during "Rear cleansing", "Rear soft cleansing" or "Front cleansing".

**Note**

- Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

**"Water pressure adjustment"**

You can select from 5 levels of water pressure.

- The setting changes by one level whenever you swipe to the left or right.

**[-] Softer**

**[+] Stronger**

- After you swipe to change the "Water pressure adjustment" setting, the set position will light for 10 seconds.
- A light will also flash for about 10 seconds to indicate the current setting when any of the cleansing buttons (rear cleansing, rear soft cleansing, front cleansing) are pressed.

---

**"Wand position adjustment"**

You can select from 5 levels of wand position between the front and the rear.

- The setting changes by one level whenever you swipe to the left or right.

**[▲] Moves to the front**

**[▼] Moves to the rear**

- After you swipe to change the "Wand position adjustment" setting, the set position will light for 10 seconds.
- A light will also flash for about 10 seconds to indicate the current setting when any of the cleansing buttons (rear cleansing, rear soft cleansing, front cleansing) are pressed.

\*1 Except TCF801CG  
\*2 Remote control transmitter (Front side, Top side)